

# INTAKE AIR TEMPERATURE (IAT) SENSOR ERROR

## Note:

1) Always clear historic DTCs before retesting.

