

Section A

**NO START,
ENGINE CRANKS
(2005 – 2008)**

Note:

1) Refer to BDM Service Manual for location of the LEDs for the ignition fault circuit.

