


Note:

1) Use appropriate test connector with leads from RK-03 Pigtail Kit located in the Electrical Service Kit #SK-4000-03.

Check for continuity on black wire between ignition module connector 28 and crank position sensor connector 27 (see note 1). Resistance should be less than 1 Ohm. Is continuity present?

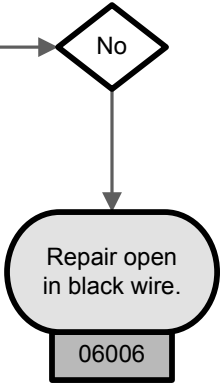

Check for continuity on black wire from ignition module connector 28 (see note 1) to ground. Is continuity present?

