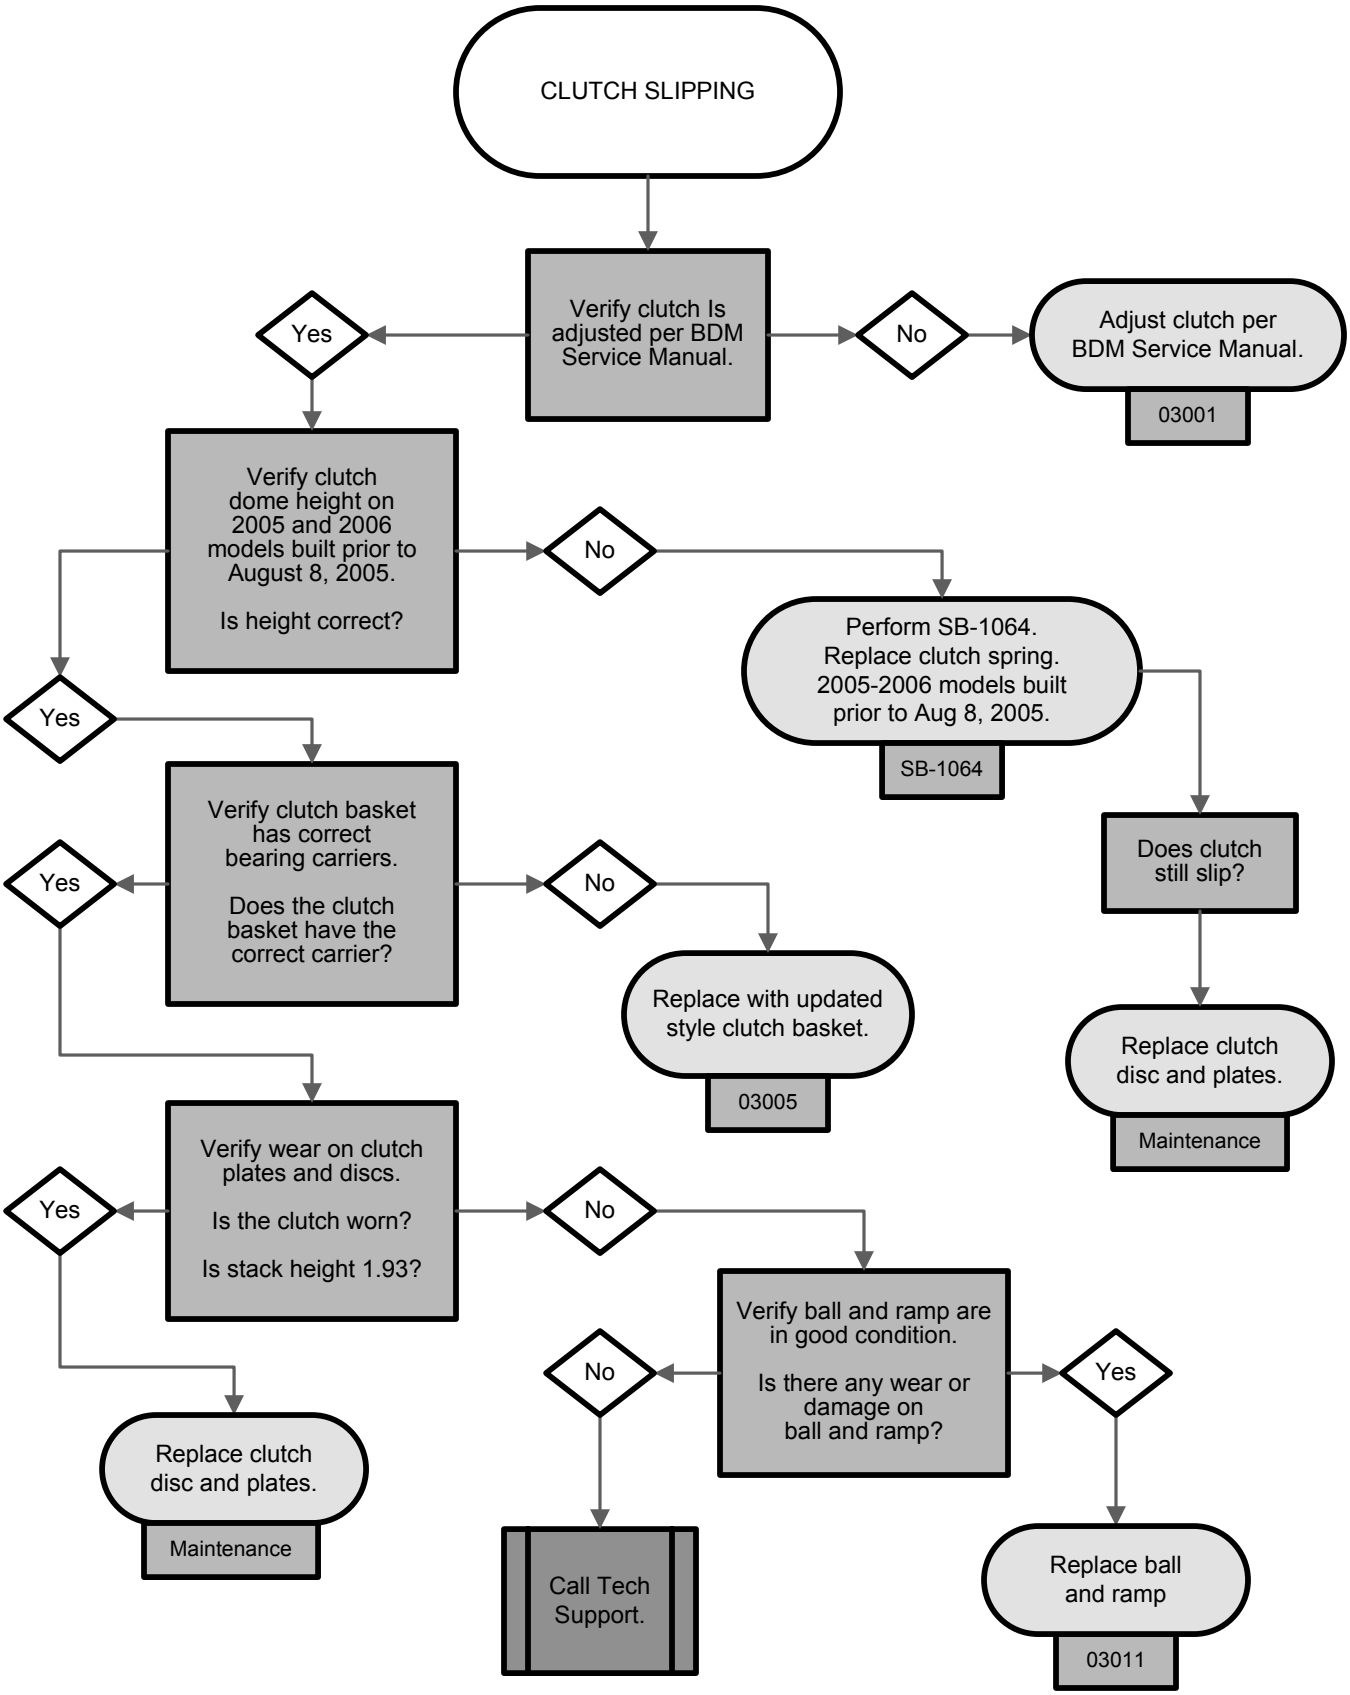
CLUTCH SLIPPING
Verify clutch Is adjusted per BDM Service Manual.
Yes
No
Adjust clutch per BDM Service Manual.
03001
Verify clutch dome height on 2005 and 2006 models built prior to August 8, 2005.
Is height correct?
No
Perform SB-1064. Replace clutch spring. 2005-2006 models built prior to Aug 8, 2005.
SB-1064
Yes
Verify clutch basket has correct bearing carriers.
Does the clutch basket have the correct carrier?
Yes
No
Replace with updated style clutch basket.
03005
Does clutch still slip?
Replace clutch disc and plates.
Maintenance
Verify wear on clutch plates and discs.
Is the clutch worn?
Is stack height 1.93?
Yes
No
Verify ball and ramp are in good condition.
Is there any wear or damage on ball and ramp?
No
Yes
Replace clutch disc and plates.
Maintenance
Call Tech Support.
Replace ball and ramp
03011